

Geomar Concept SRL

VAT/EORI RO43316318

Registration J23/5394/2020

Registered Address: Codrului 9A, Tunari, Ilfov, 077180, Romania

Warehouse: Zborului 2, Stefanestii de Sus, Ilfov, 077177, Romania

RON - RO52 ROIN 4021 6AGT FK19 73Y4

EUR - RO93 ROIN 4021 DO2N SLG6 RX7H

GBP - RO84 ROIN 4021 1UJW GPKK 74X3

USD - RO27 ROIN 4021 OBVR D3M2 4AWT

Salt Bank, BIC/SWIFT: ROINROBU

<https://ceara-soia.ro> / <https://fragrancesforcandles.com>

+40 725 864 869

ceara-soia
fragrances
FOR CANDLES

Electric Wax Melter 10L

These are the original instructions; please read all manual instructions carefully before use.

Geomar Concept SRL reserves the right to provide a clear interpretation of our user manual. The appearance of the product will be based on the product you received. Please excuse us for not informing you further in the event of technological or software updates to our product.

Warning and Recycling Symbols

Warning – To reduce the risk of injury, the user must read the instruction manual carefully.

FOR HOUSEHOLD USE ONLY

This product is subject to the provisions of European Directive 2012/19/EC. The symbol showing a wheellie bin crossed out with an X indicates that the product requires separate waste collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked with this symbol cannot be disposed of with normal household waste but must be taken to a collection point for the recycling of electrical and electronic devices.

INTRODUCTION

Electric wax melters are made of durable stainless steel and matte-polished to provide a long-lasting finish. With proper care and management, your new purchase will provide years of trouble-free operation.

IMPORTANT SAFETY RULES

1. Read all instructions carefully. Responsibility for malfunctions cannot be accepted if any of these instructions are ignored.
 - Always unplug the melter before cleaning, after use, and before emptying.
 - Before using the wax melter, check if the indicated voltage corresponds with the electrical outlet (**EU Outlet 230V / US Outlet 120V**).
 - Ensure the unit is connected to a grounded outlet.
 - Do not use the wax melter if the plug or cord is damaged; it must be replaced before use.
 - Always turn off the appliance before removing the plug from the outlet.
 - Always turn off the appliance before attempting to move the wax melter.
 - Remove the plug by pulling the plug itself. **DO NOT** pull on the cord.
 - Do not let the cord hang over the edge of the counter.
 - Place the wax melter securely in the center of the counter or workspace. Do not place the wax melter on inclined surfaces.
 - Do not place the wax melter on or near hot surfaces.
 - Do not turn on the wax melter if the wax tank is empty.
 - Do not place the wax melter near gas stoves, electric burners, or heated ovens.
 - Place the wax melter on a flat and stable surface; keep it away from the edge of the counter to avoid accidents.

Geomar Concept SRL

VAT/EORI RO43316318

Registration J23/5394/2020

Registered Address: Codrului 9A, Tunari, Ilfov, 077180, Romania

Warehouse: Zborului 2, Stefanestii de Sus, Ilfov, 077177, Romania

RON - RO52 ROIN 4021 6AGT FK19 73Y4

EUR - RO93 ROIN 4021 DO2N SLG6 RX7H

GBP - RO84 ROIN 4021 1UJW GPKK 74X3

USD - RO27 ROIN 4021 OBVR D3M2 4AWT

Salt Bank, BIC/SWIFT: ROINROBU

<https://ceara-soia.ro> / <https://fragrancesforcandles.com>

+40 725 864 869



- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the cord to touch the hot surface of the wax melter.
- To protect against electric shock, do not immerse the wax melter in water.
- Unplug the unit and pour out all wax before it cools down.
- **Switch OFF** the appliance after use and unplug the unit.
- Do not use the wax melter outdoors.
- Do not overfill the melter with wax, as this may lead to spilling when it heats up and expands.
- Improper use of the wax melter can lead to severe burns.
- Beware of hot steam when removing the lid.
- Always ensure the lid is securely fixed whenever the melter contains wax.
- Do not turn on or attempt to operate the melter when the wax level is at or below the minimum level (**Min**).
- Do not turn on the melter when the wax level is above the maximum level (**Max**). When the wax boils, it will overflow.
- If the wax melter operates without liquid (**boil dry**), there is an overheat protection that may reset automatically. However, repeated overheating will eventually damage the heating element.
- If the power cord becomes damaged, it must be replaced/repaired only by a qualified electrician.
- Do not attempt to disassemble the wax melter. This will void the warranty.
- Remove all wax before it hardens to avoid clogging the faucet. Reheating wax (in the faucet) can easily damage the appliance.
- This machine is **not suitable for jelly wax**.
- This appliance must not be operated by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have received supervision or instructions concerning the safe use of the appliance by a person responsible for their safety.

FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This product may cause harmful interference.
 2. This product must accept any interference received, including interference that may cause undesired operation.
-

Geomar Concept SRL

VAT/EORI RO43316318

Registration J23/5394/2020

Registered Address: Codrului 9A, Tunari, Ilfov, 077180, Romania

Warehouse: Zborului 2, Stefanestii de Sus, Ilfov, 077177, Romania

RON - RO52 ROIN 4021 6AGT FK19 73Y4

EUR - RO93 ROIN 4021 DO2N SLG6 RX7H

GBP - RO84 ROIN 4021 1UJW GPKK 74X3

USD - RO27 ROIN 4021 OBVR D3M2 4AWT

Salt Bank, BIC/SWIFT: ROINROBU

<https://ceara-soia.ro> / <https://fragrancesforcandles.com>

+40 725 864 869



BEFORE FIRST USE

Remove all packaging from the inside and outside of the wax melter.

Product Diagram Labels:

- **Lid** – Capac
- **Air vent** – Orificiu de aerisire
- **Cool-touch Lifting handles** – Mânere de ridicare reci la atingere
- **Proximity leather sheath** – Manșon de protecție din piele
- **Wax faucet** – Robinet pentru ceară
- **On/Off switch** – Comutator Pornit/Oprit
- **Pilot lamp** – Indicator luminos (Lampă martor)
- **Temperature regulation** – Reglarea temperaturii

HOW TO USE

1. Always use the wax melter on a flat and horizontal surface.
2. Turn the lid counter-clockwise to open it.
3. Fill the wax melter without exceeding the maximum level indicator (**Max**).
4. Put the lid back on and turn it clockwise to lock it in position.
5. Connect the plug to the outlet.
6. Turn the switch **ON**. The red "**Heating**" indicator light will turn on, and the wax will begin to heat.
7. The wax will reach the temperature set by the thermostat.
8. Place your container close to the faucet (**hold close**) to prevent wax splashing.
9. Use the faucet to dispense the wax.
10. When more wax is added, the melter will automatically restart the heating process.
11. When the wax is completely melted, turn off the appliance, unplug it, and pour out all the wax.
12. Ensure you have at least **500 ml** of wax in the tank when heating to prevent a **boil-dry** accident.
13. The melter can be very heavy when full of wax. It must not be carried or moved when full, as the weight and unstable load can cause injury. The melter should be placed in its usage position and filled using a smaller, easy-to-handle container (e.g., a pitcher). To ensure operator safety, the melter should **never be moved when filled with more than 5L** (5L = approximately 5kg).

BOIL DRY PROTECTION

The appliance is protected by a thermal limiter with an automatic reset function to prevent accidental boil-dry operation. If the wax in the tank evaporates completely and this protection is activated, the appliance will turn itself off, although the indicator light will remain on. The appliance

Geomar Concept SRL
VAT/EORI RO43316318
Registration J23/5394/2020
Registered Address: Codrului 9A, Tunari, Ilfov, 077180, Romania
Warehouse: Zborului 2, Stefanestii de Sus, Ilfov, 077177, Romania
RON - RO52 ROIN 4021 6AGT FK19 73Y4
EUR - RO93 ROIN 4021 DO2N SLG6 RX7H
GBP - RO84 ROIN 4021 1UJW GPKK 74X3
USD - RO27 ROIN 4021 OBVR D3M2 4AWT
Salt Bank, BIC/SWIFT: ROINROBU
<https://ceara-soia.ro> / <https://fragrancesforcandles.com>
+40 725 864 869



must be unplugged before it can be reset. To reset, wait until it has cooled down, then turn it on again and check if the heating indicator light is on. If the light is on, the unit has resumed its normal operating state; if the light is still off, unplug it and try turning it on again. Repeat this several times until the appliance enters a normal operating state.

This device is for the protection of the user as well as the components. In case of repeated incidents, the bimetal may fail, causing irreparable damage to the thermal limiter and the heating element. Please note that the manufacturer will not provide a warranty for such negligent use.

THERMAL CUT-OUT

The appliance is equipped with a thermal cut-out for double safety protection. If the wax boils away completely and the boil-dry protection fails, the thermal cut-out will operate, and the appliance will shut down.

- The trigger temperature for the fuse is **240°C**.
- This thermal cut-out is a **one-time use part**. Once it activates, it will break and cannot be used again. The appliance must be taken to an authorized agent to replace the thermal fuse.

CLEANING AND MAINTENANCE

A. Perform cleaning only after the plug has been removed and the wax melter has cooled completely.

B. Never immerse the wax melter in water.

C. Pour hot water into the melter, brush the walls, melt the wax completely, then pour out the water.

D. Do not use cleaning products that may cause a health hazard.

E. Use a soft cloth to dry the body of the unit. Do not use abrasive materials to avoid scratches.

Specifications Tables

Items	Description
1. Name	Wax melting barrel
2. Model	DTL-S007(A)
3. Rating(s)	220-240V~ 50Hz / 1520W / 6.5L

Items	Description
1. Name	Wax melting barrel
2. Model	DTL-S010(A)
3. Rating(s)	220-240V~ 50Hz / 1520W / 10L

Parts List:

- Stirring spoon – 1 pc
- Stainless steel pitcher – 1 pc
- Scoop – 1 pc

Geomar Concept SRL

VAT/EORI RO43316318

Registration J23/5394/2020

Registered Address: Codrului 9A, Tunari, Ilfov, 077180, Romania

Warehouse: Zborului 2, Stefanestii de Sus, Ilfov, 077177, Romania

RON - RO52 ROIN 4021 6AGT FKI9 73Y4

EUR - RO93 ROIN 4021 DO2N SLG6 RX7H

GBP - RO84 ROIN 4021 1UJW GPKK 74X3

USD - RO27 ROIN 4021 OBVR D3M2 4AWT

Salt Bank, BIC/SWIFT: ROINROBU

<https://ceara-soia.ro> / <https://fragrancesforcandles.com>

+40 725 864 869



- Stainless steel centering device – 2 pcs
- Candle wicks – 100 pcs
- Stickers – 100 pcs

Warranty

- **Individuals:** 24 months
- **Legal entities (Businesses):** 12 months

Cases in which the warranty is NOT valid:

- The appliance burns out due to overvoltage or undervoltage outside the 220V – 240V range or due to a short circuit. You must use a voltage regulator (stabilizer) for protection.
- The appliance suffers mechanical impacts during handling.
- The appliance burns out due to the electrical parts getting wet with water or other liquids.
- The appliance burns out due to the insertion of objects into the electrical components.
- The appliance is used for purposes other than those recommended by the supplier.